


H. L. Worden Co. "Make a Lamp" System

GF13-9 Small Dogwood T

Rev. 4/13

Cartoon Pattern Packet

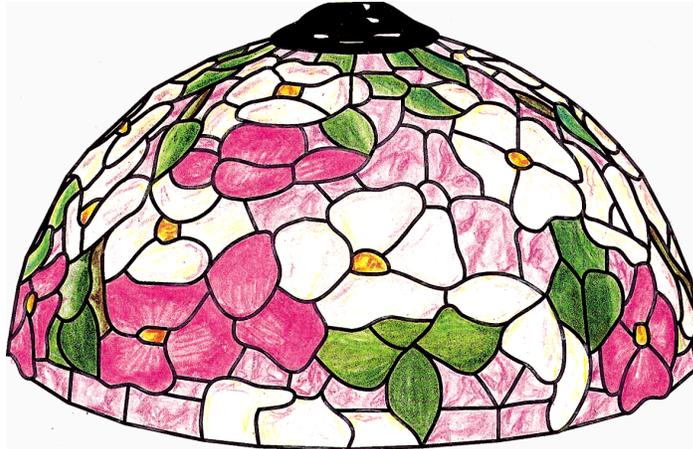

Lamp Specifications

No. Glass Pieces: 306
Glass Needed: 4.3 sq. ft.
Diameter: 13"
Height: 5.5"
Aperture: 3"
Design Repeats: 3

Needed to make this lamp

Pattern Packet No. GF13-9*
FullForm™ No. GF13**
Stained Glass
3" Vase Cap***
Lamp Base or Hanging Hardware
to Swag

Additional Items Needed

Basic Supplies
Basic Tools


*No. GF13-9 Pattern Packet

Includes:

1 Paper Pattern Sheet
3 MagicStrip™ Sheets
1 Instructions
1 Color Key w/ Glass Descriptions

**No. GF13 FullForm™

360° form embossed and
numbered to accept glass
placement guides (cartoon)

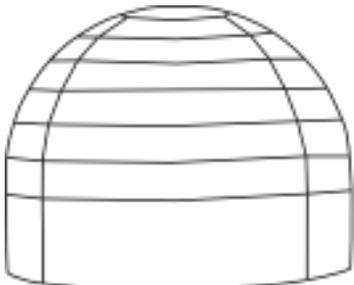

One Reusable FullForm™ is used
to make this 3-repeat design

** 3" Vase Cap



HC3 VC3 VHC3
Need One 3" (7.6cm) Vase Cap
Sold Separately

Lamp Color	Key	Description	Glass Type	Sq. Ft.
FP	White Petals	White Opal	1.5	
N	Background	Lt. Purple Opal	1	
L	Leaves	Dk. Green/Yellow	.75	
FP1	Pink Petals	Pink Opal	.75	
FC	Flower Center	Yellow Opal	.125	
ST	Stems	Lt. Brown Opal	.125	

Paper Pattern
MagicStrips™
MADE IN USA

©2001, H. L. WORDEN CO. ALL RIGHTS RESERVED

FULL FORM CONSTRUCTION TIPS

Follow the Basic Method detailed in the WordenSystem™ Instruction Manual.

(1) Select, cut, trim, and pin all stained glass pieces over the MagicStrip™ cartoon on the form. COMPLETELY COVER THE FORM. Use glass headed pins or common pins. Be sure to push the pins all the way in to hold each glass piece securely.

(2) To ensure the vase cap will be level: If using a positioner; place vase cap at the top of the form; secure with a lock nut; cut and fit glass to the vase cap; tack solder before removing shade from the form.

If not using positioner: place a 4" threaded rod through the hole in the form; place vase cap at top of the form; put a second vase cap or a check ring or washer inside the form; secure with lock nuts at both ends of the rod; cut and fit glass to the vase cap as above. If necessary, trim the top of the form to fit the vase cap in place.

(3) To foil, pull the pins part way out, just far enough to remove each glass piece one at a time; foil & repin.

(4) Tack solder all glass pieces together. Wipe and burnish with a wet cloth to stop oxidation.

(5) Remove all of the pins. Leave the lamp on the form and make a flat seam by tinning all exposed copper foil. Wipe and burnish with a wet cloth.

(6) DO NOT BUILD ROUNDED SEAMS ON THE FORM. Remove the lamp and fill and then build the inside seams then do the outside.

By filling the inside first, any flow through will be removed when building the outside seams.



Use our No. 330 Positioner for full forms. The No. 330 is also used with partially finished shades whether built on sectional or full forms. Once the vase cap is installed put your lamp on the No. 330 and position the shade to have a level surface for final soldering.

GlassHouseStore.com
Decatur IL

