

H. L. Worden Co.
"Make a Lamp"
System

GF16-1 Stylized Rose W

Rev. 1/13


Cartoon Pattern Packet

Lamp Specifications

No. Glass Pieces: 360
 Glass Needed: 5.5 sq. ft.
 Diameter: 16"
 Height: 7"
 Aperture: 3"
 Design Repeats: 4

Needed to make this lamp

Pattern Packet No. GF16-1*
 FullForm™ No. GF16**
 Stained Glass
 3" Vase Cap***
 Lamp Base or Hanging Hardware
 to Swag

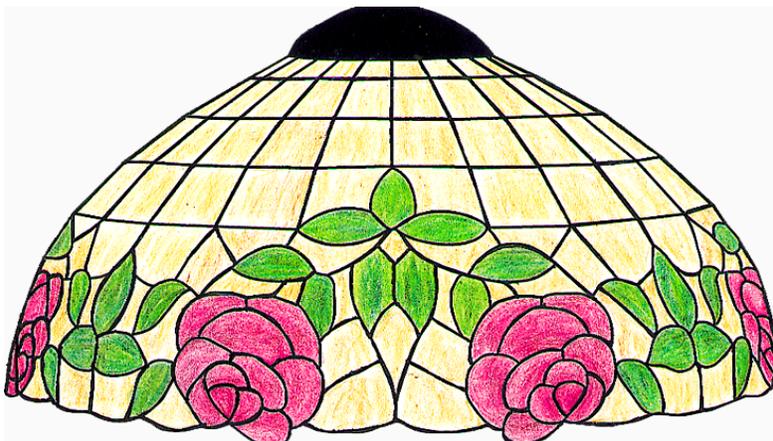

Additional Items Needed

Basic Supplies
 Basic Tools

***No. GF16-1 Pattern Packet**

Includes:

1 Paper Pattern Sheet
 4 MagicStrip™ Sheets
 1 Instructions
 1 Color Key w/ Glass Descriptions
 1 4" Glass Band & Crown jig
 1 Crown Instruction Sheet

****No. GF16 FullForm™**


360° form embossed and
 numbered to accept glass

plc



One Reusable FullForm™ is used
 to make this 4-repeat design

**** 3" Vase Cap**



HC3 VC3 VHC3

Need One 3" (7.6cm) Vase Cap
 Sold Separately

Lamp

Color



Key	Description	Glass Type	Sq. Ft.
E	Background	Lt. Amber Opal	3.5
R	Roses	Pink Opal	1
L	Leaves	Green Opal	1

Paper Pattern
 MagicStrips™
 MADE IN USA

©1989, H. L. WORDEN CO. ALL RIGHTS RESERVED

FULL FORM CONSTRUCTION TIPS

Follow the Basic Method detailed in the WordenSystem™ Instruction Manual.

(1) Select, cut, trim, and pin all stained glass pieces over the MagicStrip™ cartoon on the form. COMPLETELY COVER THE FORM. Use glass headed pins or common pins. Be sure to push the pins all the way in to hold each glass piece securely.

(2) To ensure the vase cap will be level: If using a positioner; place vase cap at the top of the form; secure with a lock nut; cut and fit glass to the vase cap; tack solder before removing shade from the form.

If not using positioner: place a 4" threaded rod through the hole in the form; place vase cap at top of the form; put a second vase cap or a check ring or washer inside the form; secure with lock nuts at both ends of the rod; cut and fit glass to the vase cap as above. If necessary, trim the top of the form to fit the vase cap in place.

(3) To foil, pull the pins part way out, just far enough to remove each glass piece one at a time; foil & repin.

(4) Tack solder all glass pieces together. Wipe and burnish with a wet cloth to stop oxidation.

(5) Remove all of the pins. Leave the lamp on the form and make a flat seam by tinning all exposed copper foil. Wipe and burnish with a wet cloth.

Construction tip for 360° Form which curve in at the bottom: When making a lamp on a 360° FullForm™, such as the CF18 which curves in at the bottom, you must remove the shade in two parts either vertical or horizontal. You decide which is most appropriate for your particular lamp shade and skill level. **Please see instructions for details.**

(6) DO NOT BUILD ROUNDED SEAMS ON THE FORM. Remove the lamp and fill and then build the inside seams then do the outside.

By filling the inside first, any flow through will be removed when building the outside seams.

Strip Grid Cutting

For fast, easy cutting, background may be assembled in strips either horizontally or vertically. Assemble grid vertically so that color flow and grain extends from one part to the next.


Vertical: Arrange the background pieces together similar illustration with no space between. Fasten together with cellophane tape. Notch can be drawn on the glass the center of this line be

Score, break and proceed with the balance how patterns can be


Horizontal: First cut the height of each piece row around the lamp will the rows in a lamp will be pattern on the glass while

end until you have enough to cover one sectional form or one pattern repeat. Make adjustments if necessary and cut out the number you will need for the entire lamp.

Overlap the grid pattern pieces so that adjoining pieces share a score line.

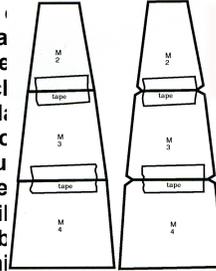

Score Pattern together. Score in Pattern pieces arranged to cut grid work vertically.

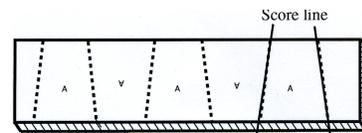


Arrange grid work pattern on strips, mark and score

GlassHouseStore.com
Decatur IL



Use our No. 330 Positioner for full forms. The No. 330 is also used with partially finished shades whether built on sectional or full forms. Once the vase cap is installed put your lamp on the No. 330 and position the shade to have a level surface for final soldering.

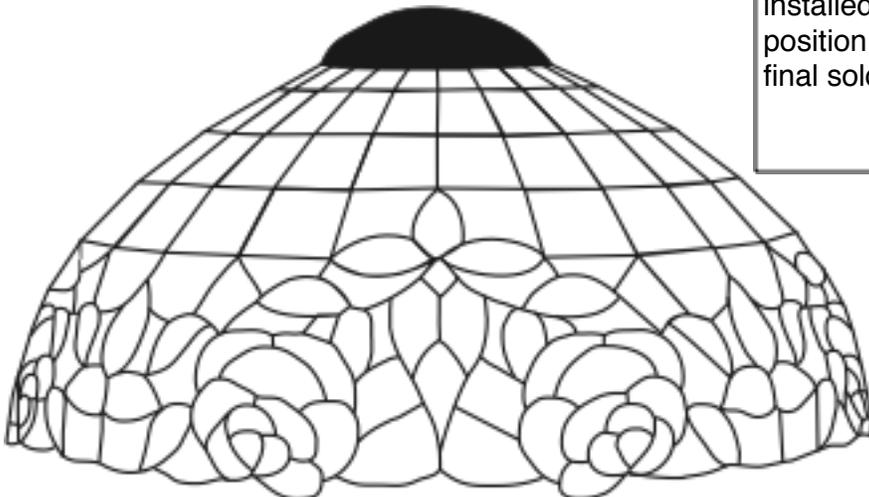

Make copies of this picture to try different color combinations for your lamp. Use the paper pattern for glass piece description.

